
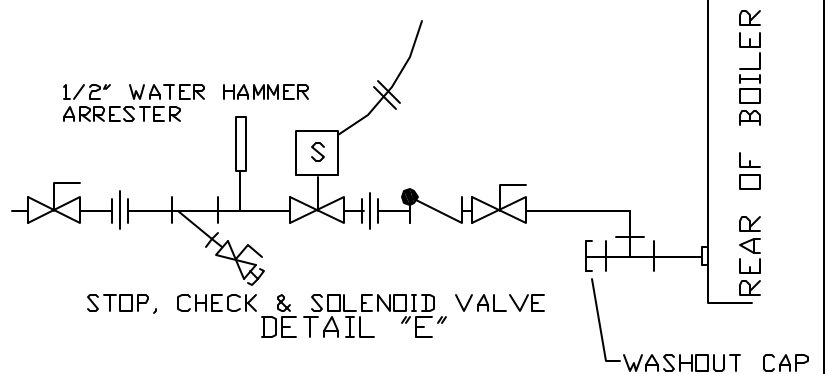
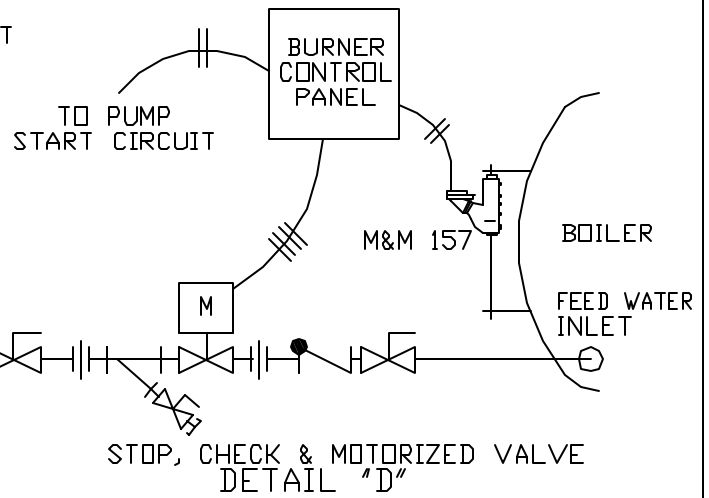


THE HEADER NEEDS TO DRAIN BY GRAVITY, THE BOILER TRAP CAN LIFT UP TO THE HEADER, ONE FOOT FOR EVERY ONE PSI OF OPERATING PRESS. EXAMPLE 5 PSI = 5' LIFT USE ONLY F&T TRAPS AND THE DISCHARGE CHECK IS REQUIRED. ALWAYS DROP INTO THE HEADER TO AVOID WATER HAMMER.

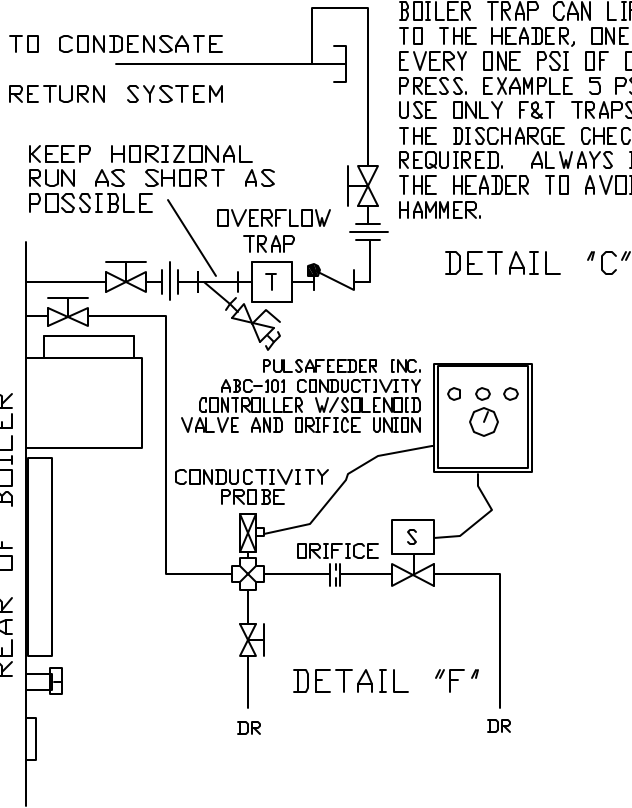

- M - MOTORIZED BOILER FEED VALVE
- S - SOLENOID BOILER FEED VALVE
- Y-STRAINER
- ORIFICE UNION
- GATE VALVE
- CHECK VALVE NPT OR FLNG
- BALL VALVE
- PRESSURE GAUGE W/VALVE
- CIRCUIT BALANCE VALVE

PROVIDE UNIONS AS NECESSARY FOR SERVICE

E			
D			
C			
B			
A	01	ADD STRAINER BLOWDOWN VALVES	2/24/14
NO.	E.C.N.	REVISION	DATE
THIS DOCUMENT CONTAINS MATERIAL AND/OR INFORMATION WHICH IS THE PROPERTY OF MEILNER MECHANICAL SALES INC. AND SUPPLIED ONLY ON CONFIDENTIAL BASIS. NO TRANSMITTAL OR DISCLOSURE SHALL BE MADE TO ANY PERSON, FIRM, OR CORPORATION WITHOUT PRIOR WRITTEN APPROVAL OF MEILNER MECHANICAL SALES.			
MADE	AGR	DATE	10-16-02
CHECKED		SCALE	NONE

TOLERANCE UNLESS OTHERWISE SPECIFIED
 FRACTION x + 1/8"
 TWO PLACE DECIMALS xx + 1/16"
 THREE PLACE DECIMALS xxx + 1/32"

MEILNER
MECHANICAL SALES INC.

TYPICAL PIPING FOR
BOILER FEED WATER SYSTEMS

SIZE	PART NUMBER	REV
	BFS TYPICAL MD	1